

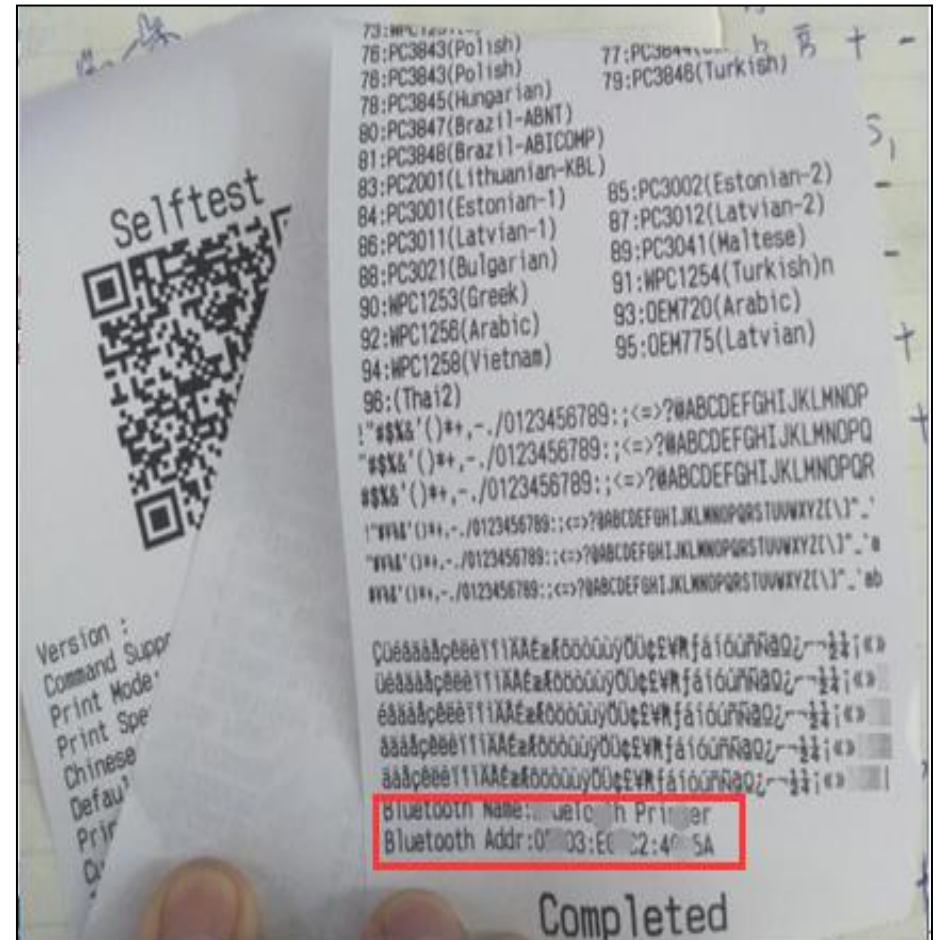


# Bluetooth Printer Instructions


1. Get the printer's bluetooth address by printing the self test page. Please print the self test page like the picture on left, firstly press the “feed key”, then press the “power key”, when the power key is on, first release the “power key”, then release the “feed key”, so the printer will print out the self test page like the picture on right, the red rectangle area is the printer's bluetooth name and address.

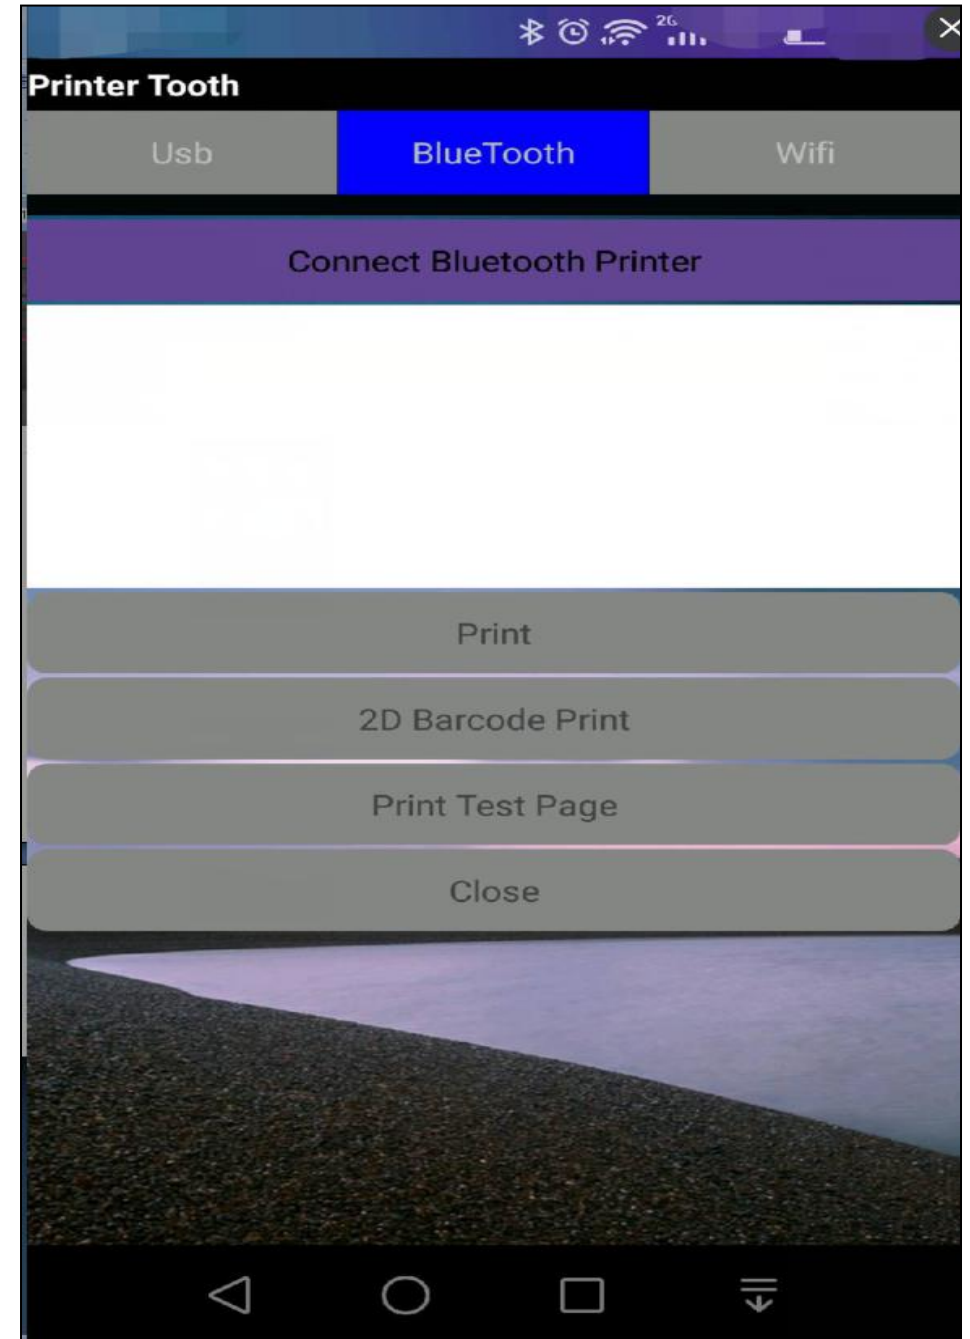

2. Install the test APP “PrinterTooth.apk”. You can save the file on the mobile equipment then install, after installed, you can see the image like the picture on left, open this then you can enter the interface line the picture on right.

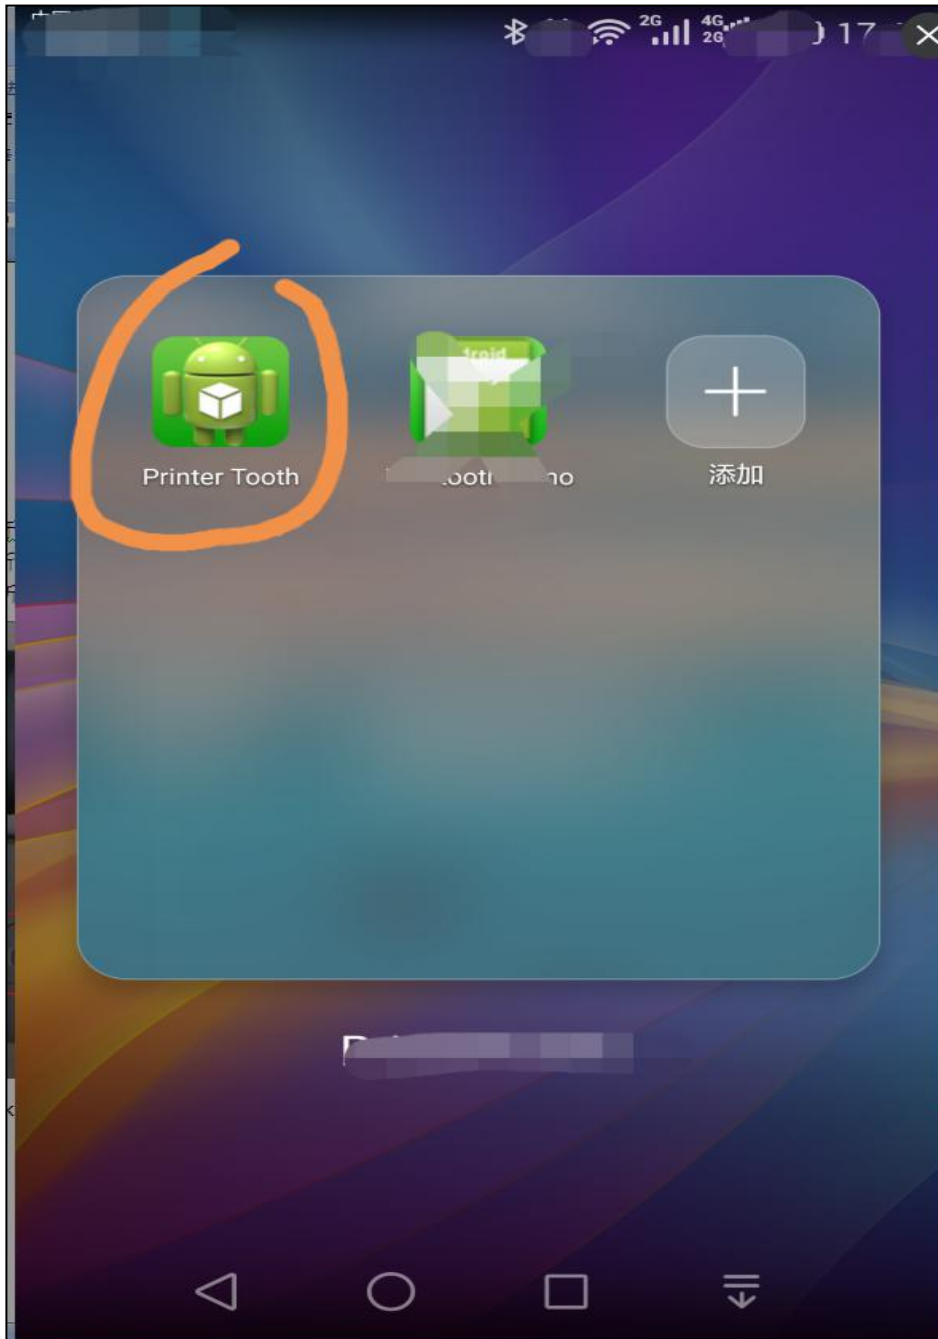

3. Connect to test the printer. Choose the “Bluetooth” then press “Connect Bluetooth Printer”, search the bluetooth device on a new page then you can find the printer. The bluetooth name and address is the same as the self test page like picture on left, then click this printer and input the pairing code on a new page (default:1234).

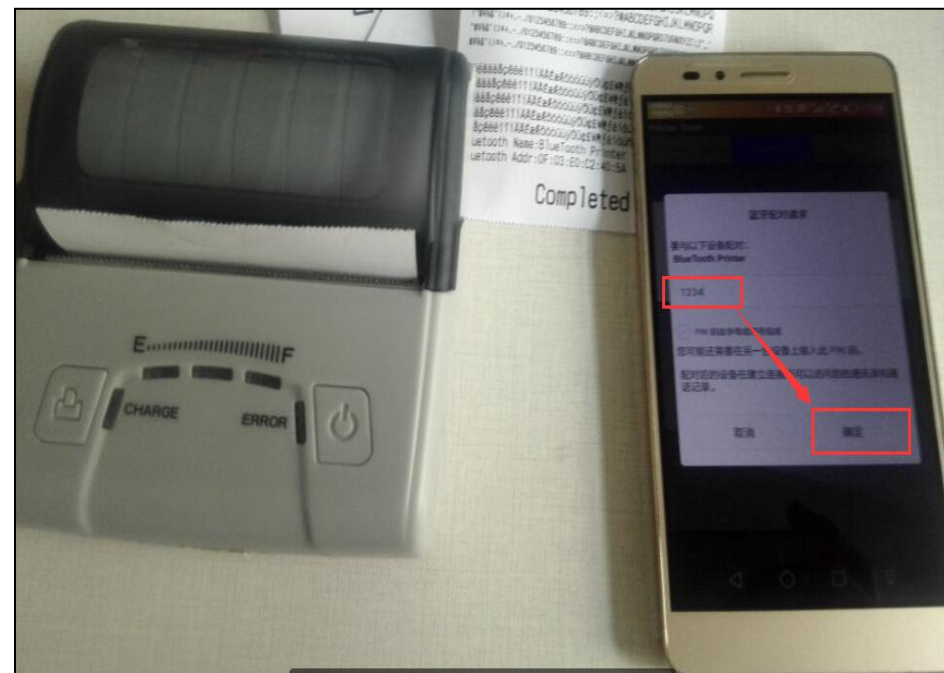

4. When connected successful, the App will remind you like the picture on left “connect successful”. The next step you can input the content which you want to print, then press “print”, the printer will start to print out the content just like the picture on right.

